

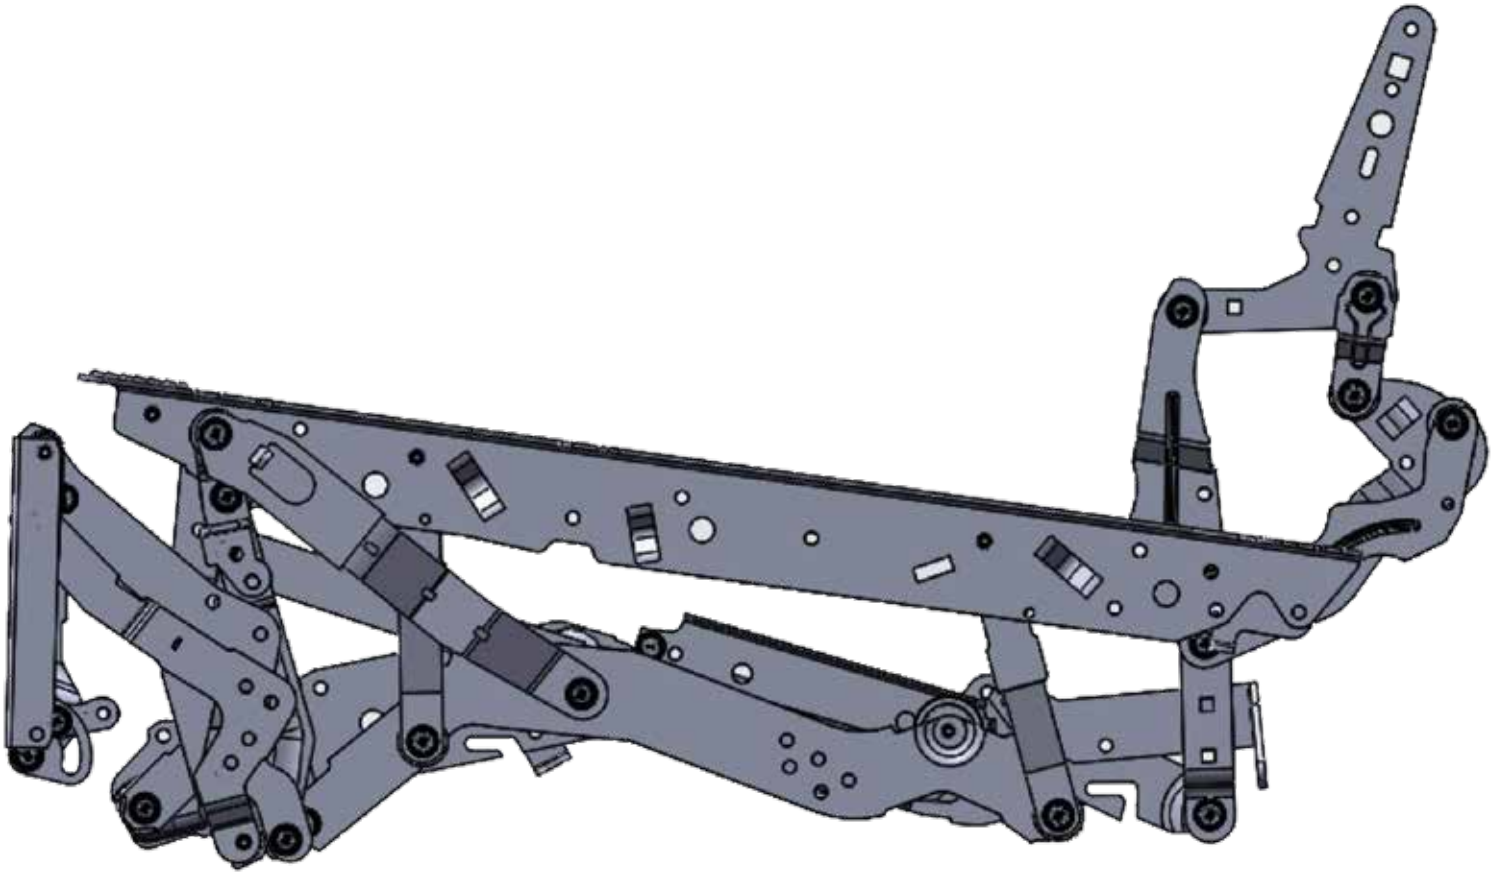


P03 Right Mechanism


Front Crossbar

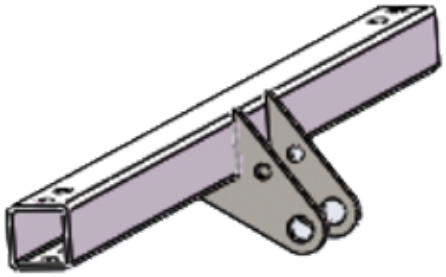


Stabilizer Tube

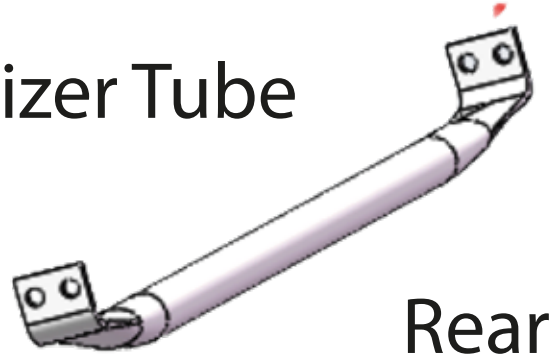


Rear Crossbar

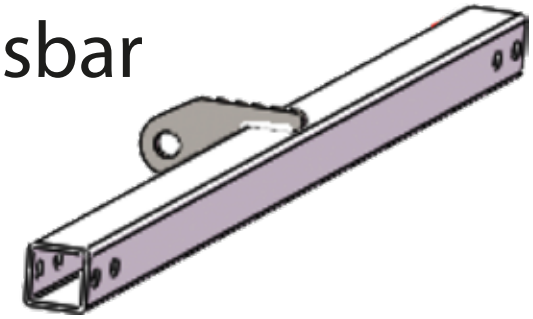


1. Assemble the front bar whit 4pcs of
1/4”X38mm screw 4pcs of flange nut

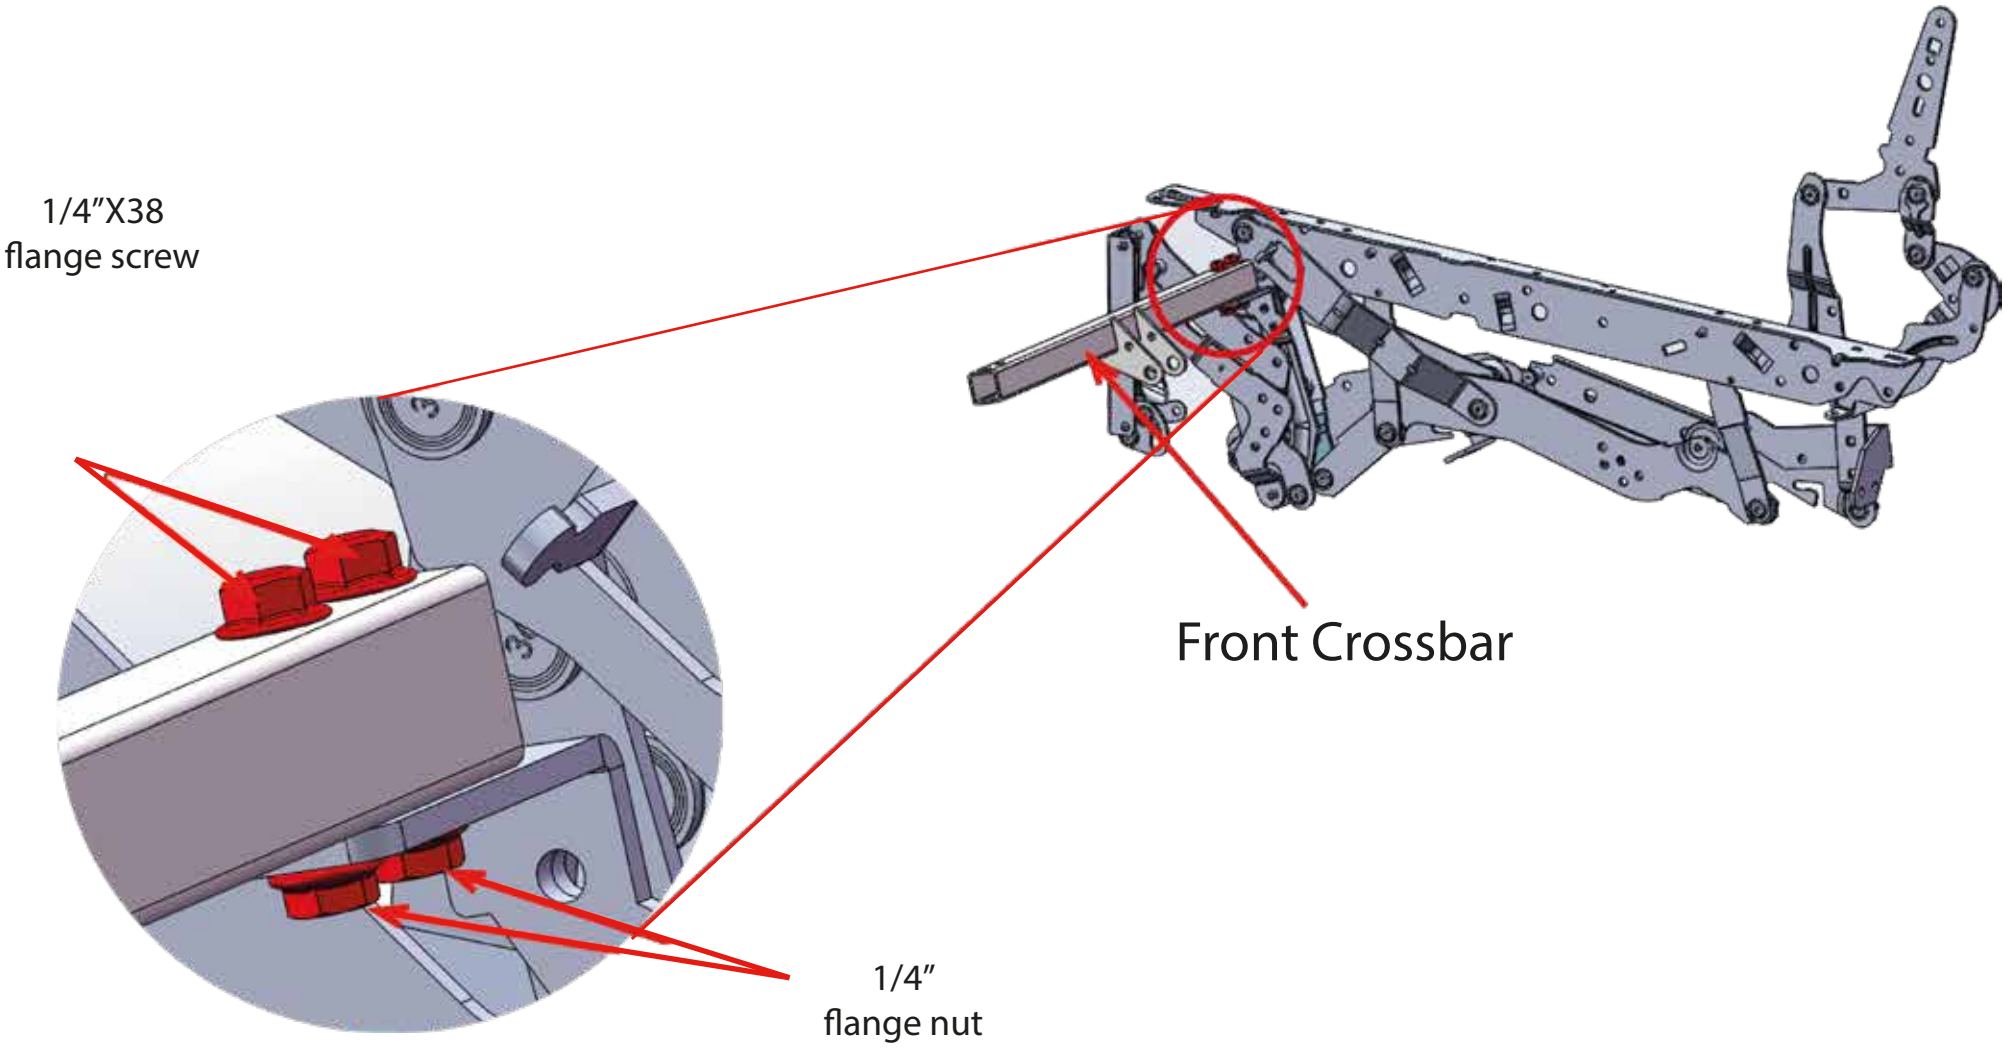


2. Assemble the STABLIZER TUBE
with 4pcs of ST7X13 short screw

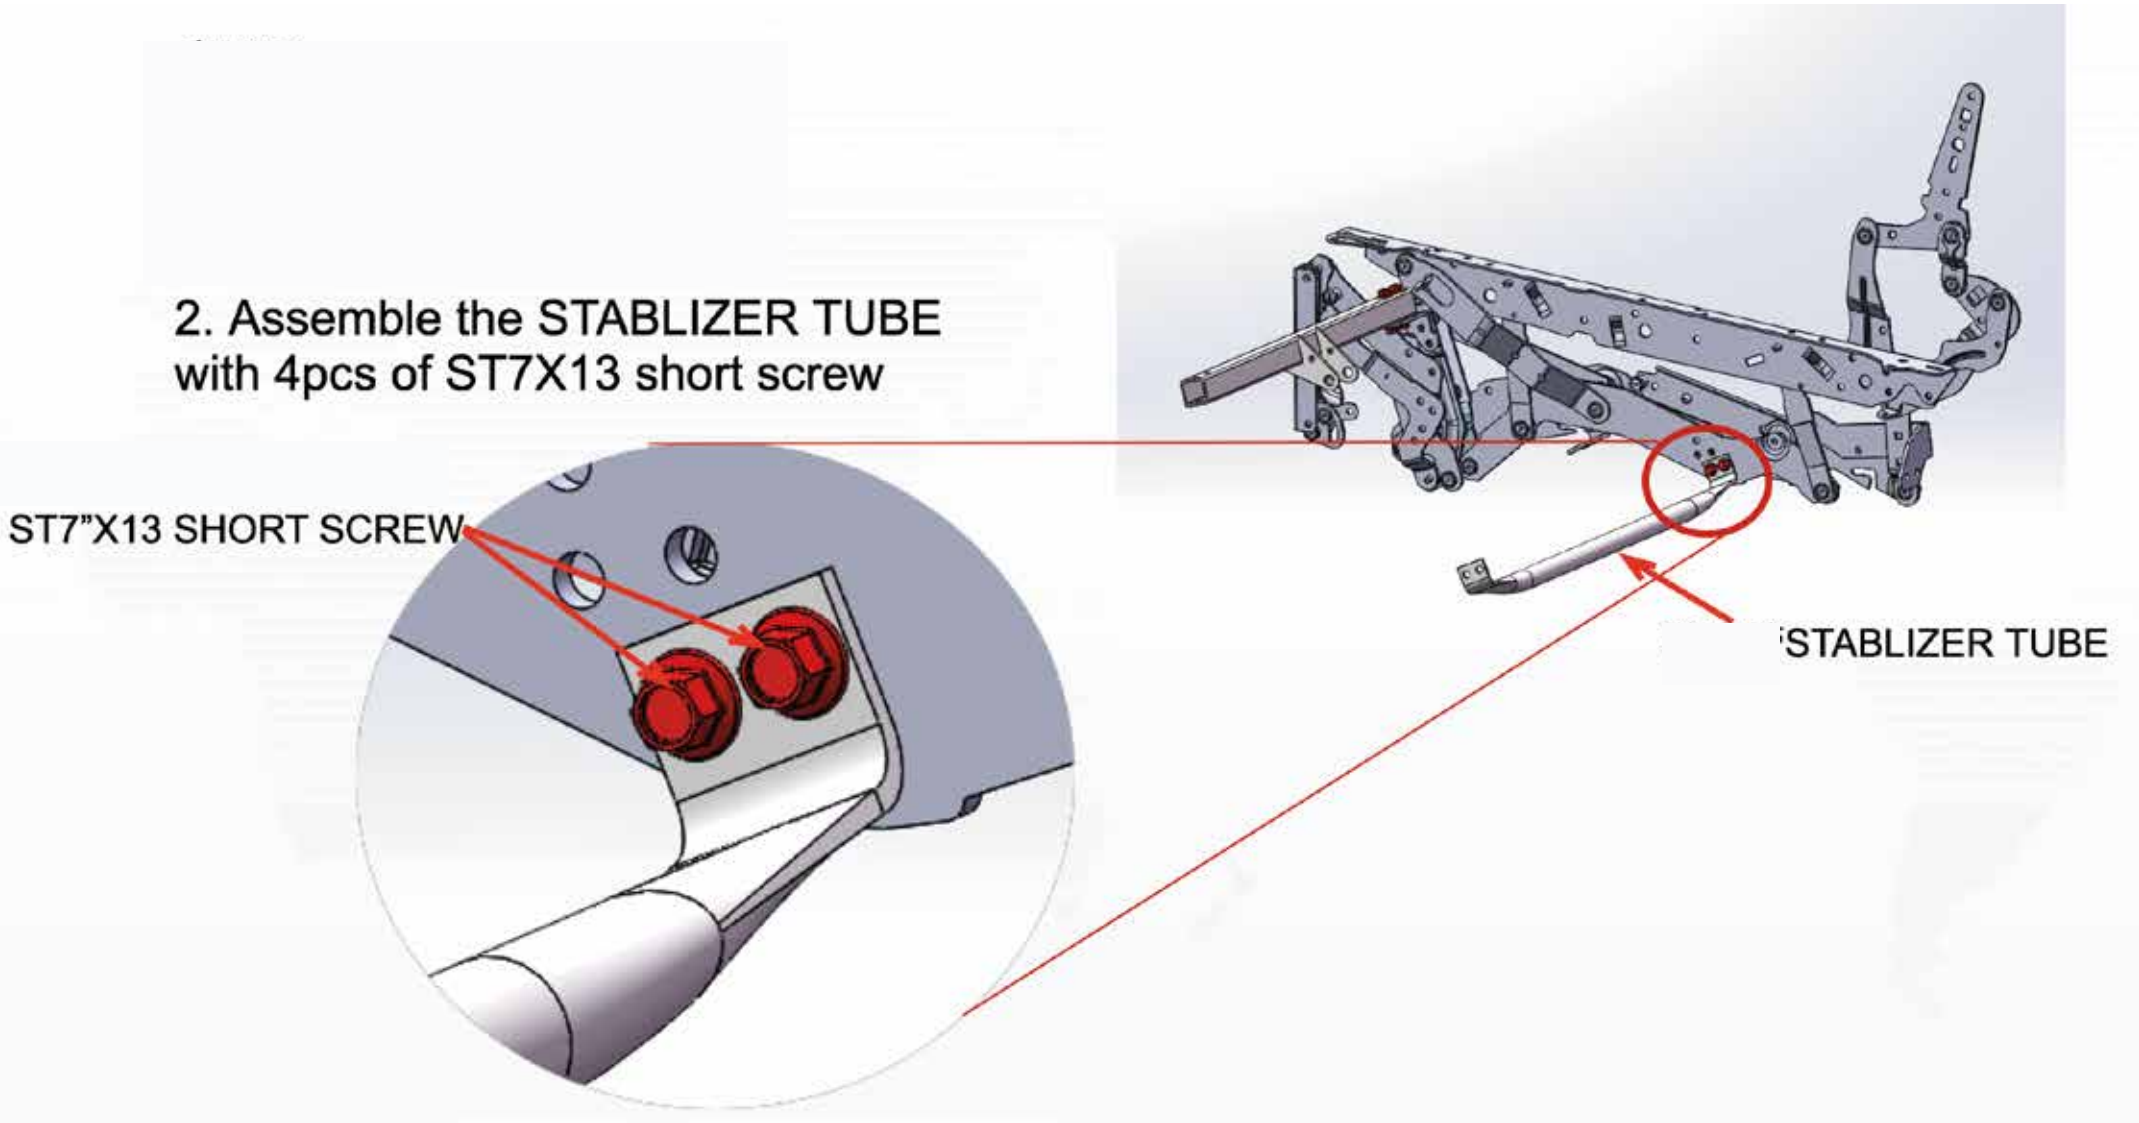

3. Assembly the rear bar with 4pcs of 1/4”X38mm screw and 4pcs of flange nut

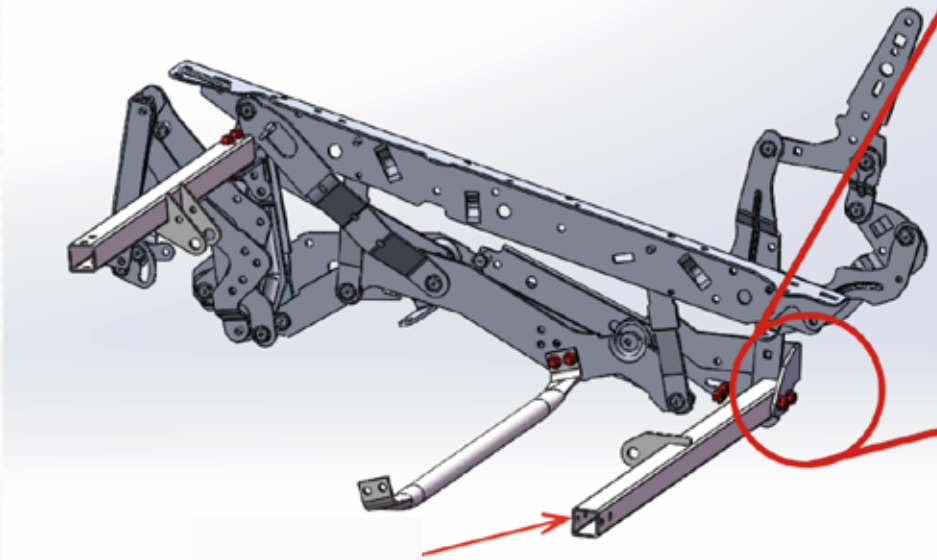

rear bar

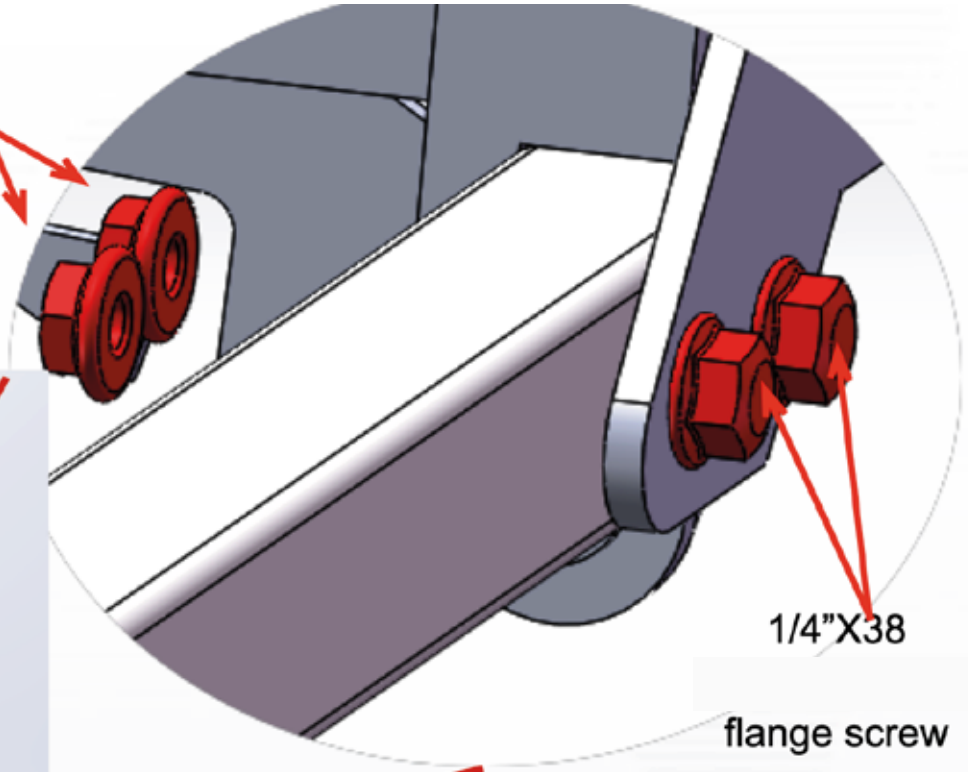

Assemble motor with pins
and spring clips

